

## InReach Basic Instructions:

First of all, turn the unit on by holding down the button with the 'check' mark on it for 3 seconds. Be advised that there is a button on the bottom that slides to the left or right in order to lock the unit. If you are seeing red, the unit is locked and it will not respond to any commands. Make sure the "safety" is off in order to use the InReach.



### Sending Messages

Once you have turned the unit on and are ready to send/receive a message use the directional pad to highlight the 'messages' icon. To open an icon use the 'check' button. To go back to a previous screen, use the button with the 'X' on it. Once you have opened the 'messages' icon and want to send a new message, use the directional pad to highlight 'new message' and press the 'check' button.

Next you want to select a recipient from the pre-programmed (by us) list of recipients. Use the right arrow on the directional pad to highlight the icon that allows you to select from the list of recipients rather than manually type in a recipient. Now, press the 'check' box. This opens the screen with the list of POP recipients. Select the recipient you want to send the message to by

using the up/down arrows on the directional pad. For example, if you want to send a message to POPOBSERVER, move the directional pad down until POPOBSERVER is highlighted in green.

Press the 'check' button. You can verify that you have selected the desired recipient when you see check appear in the box next to the recipient's name. Now that you have selected the desired recipient, press the 'X' button. This takes you back to the message screen where the 'message' field should be highlighted in green. Next, press the 'check' button. This takes you to the screen where you actually type in the message. Use the directional pad to move the green highlighted box to the desired letter and press the 'check' button again to select that letter. Type in the message. You can use numbers by highlighting and pressing the '123' box on the bottom right.

Once you have typed in the message, highlight and press the 'OK' box on the right hand side of the screen. This takes you back to a screen where you can read your message. On the bottom of this screen, 'send' should be highlighted in green. To send the message, press the 'check' button.

You will know that your message has been sent when you see an 'X' mark appear in a circle to the left of the message. Be sure to have a clear view of the sky when you are trying to send/receive a message.

## **Receiving Messages**

To read new messages use the directional pad to highlight the 'messages' icon. You will know if you have a new message by the presence of an envelope on the icon. The unit will also beep to let you know if there is a new message. Press the 'check' button to access, read and respond to the text message.

The InReach unit is designed to check for new messages at certain times. If you want to go ahead and check for a message you will need to access the 'mailbox' icon with the word 'check' underneath it. Highlight this icon by using the directional pad and press the 'check' button. Once you open this icon, you will see a screen that says the unit is 'listening' for new messages as well as how much time is remaining until the unit checks for new messages. To go ahead and check for messages, use the directional pad highlight the 'check now' box. Press the 'check' button. The unit is now checking for new messages. If you do not do this step your InReach will not automatically check for new messages until the time indicated on the screen and you will essentially be waiting until the InReach unit is programmed to check for messages.

# MORE IN DEPTH INSTRUCTIONS:

## Using inReach SE


---

### Charging

---

The inReach SE has a rechargeable lithium polymer battery. To charge the inReach, plug it into the wall using the adapter, or plug it into your computer using the USB cable.

When the device is powered on and plugged in to charge, a lightning bolt will display in the header bar next to the battery percentage. When the device is fully charged at 100%, a plug icon will display. The lightning bolt will disappear when the device is unplugged.

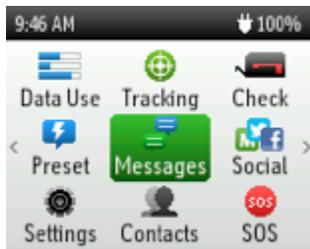

Each time the inReach is plugged in while powered off, the display turns on and shows the percentage of battery charge and the time required to reach a full charge.

### Power On/Off


---

To power on the inReach SE, press and hold the Check/Power button for three seconds.

When the inReach SE is turned on, press and hold the Check/Power button for three seconds to display a page of options:

- Power off
- Lock the buttons
- Adjust the screen brightness
- Mute the device

Select the option you want using the directional pad and press the Check/Power button again.

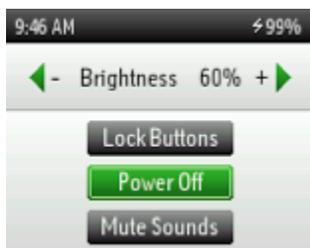

---

## Satellite Connection

---



The inReach SE requires a clear view of the sky to acquire a GPS fix and transmit your messages over the Iridium® satellite network. This process should take less than one minute, but it could take more time if the line of sight is obstructed.

For the best reception when wearing the inReach, attach it to a backpack strap or to your upper body. If you attach the pack clip to your belt, some of the signal may be blocked by your body and could prevent proper transmission of messages and tracking points.

---

## Navigation

---

The inReach SE home screen displays icons that you can select to perform tasks with the device. Access a second screen of icons by moving to the left or right from the first screen.

On any screen, use the directional pad — up, down, left, and right — to make selections. Once you've highlighted the option you'd like to choose, press Enter. To back up to the previous screen at any time, press the Quit button.




---

## Keyboard Shortcuts

---

Speed up your typing by using several keyboard shortcuts. Press and hold arrows on the directional pad to trigger these special shortcuts:

<b>Press and hold</b>	<b>Shortcut</b>
Left Arrow	Backspace
Right Arrow	Space
Up Arrow	Shift
Down Arrow	OK
Enter	Additional Shortcut Characters

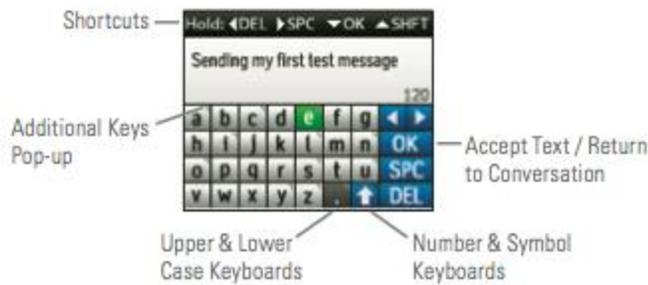


---

## Data Use

---

Keep track of your data usage with the inReach SE. From the home screen, select Data Use and press Enter. The screen will display information about your specific data plan and volume of data you have used for the current billing period.

---

## Contacts


---

Your inReach SE contains a list of Contacts, similar to an address book, which is stored on the device. To create your contact list, you can:

- Sync your device with your Explore account via the USB cable,
- Sync your device with your Explore account by pairing your inReach SE with a mobile device, or
- Manually type contact information into the inReach SE.

To view your list of contacts, select Contacts from the home screen. Your contacts will be listed in alphabetical order by first name. To select a contact, use the directional pad to scroll through and select a name. Press Enter to see a contact's details, like phone number and email address.

### Create a New Contact

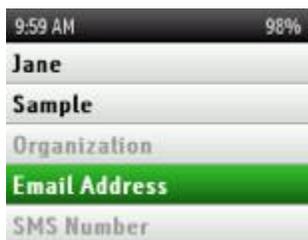

To create a new contact, select Contacts from the home screen, and then select Create New. A keyboard and cursor will appear, prompting you to enter in the new contact information. Use the keyboard to type in the contact details. The keyboard will switch to numbers and symbols automatically when you move your cursor into the SMS Number field. When you've finished entering the information, select OK and press Enter.

The inReach SE automatically attempts to verify the contact information you entered. If the information you input doesn't meet the requirements of a phone number or email address (i.e. there is no "@" in an email), the inReach SE

will notify you that you have made an invalid entry. You can edit by selecting the information. The keyboard and cursor will appear again.

New contacts are automatically added each time you send or receive a message from a person who is not already listed in your address book.

### **Edit a Contact**

To edit an existing contact, select Contacts from the home screen, and then select the contact you'd like to edit. When the contact's details appear on screen, select the field you'd like to edit. The keyboard will appear, allowing you to type in edits. When you've finished updating the contact, select OK and press Enter.

### **Delete a Contact**

To delete an existing contact, select Contacts from the home screen, and then select the contact you'd like to delete. When the contact's details appear, highlight the Delete button at the bottom and press Enter. The inReach SE will prompt you to confirm that you want to delete the contact. Select Delete and press Enter.

---

## Messages

---

### **Send and receive messages**

To view the messages you have sent and received, select Messages from the home screen and press OK. The Messages page displays a list of all your conversations. All sent and received messages are also available on the Explore website.

When you have unread messages, the inReach SE will notify you on the home screen with a number above the Messages option. The number indicates the total unread messages you have.

### **Read Messages**

To read your messages, select Messages from the home screen and press OK. The number of unread messages is indicated at the top of the page. Your messages are listed chronologically starting with the latest sent or received message. Unread messages will have a green dot in front of them. Once you have read the message, the green dot will disappear.

To read a message, select it using the directional pad and press OK. The text of the message will appear. Use the directional pad to scroll through the entire message.

### **Send Messages**

To send a message, select Messages from the home screen and press Enter. On the next screen, select New Message and press Enter. You have three options for selecting your recipient(s):

1. Select the "To" field, and a keyboard will appear. Begin to type a name and the inReach will names from your Contacts. To select the suggested Contact, press and hold the Down arrow.
2. Use Select to access your Contacts and press Enter. Choose your recipient(s) and press Enter.

3. Select the To: field and type out the recipient's full contact information (i.e. email address or SMS number) and press Enter.



To compose a message, select the Message field. The keyboard will automatically appear again. Write out your message or use Select to pick from Quick Text messages. When you're finished, press Enter. To send the message, select Send and press Enter.

### **Reply to Messages**

To reply to an existing message, open the message. Select Reply and press Enter. Compose the message and press Enter. To send the message, select Send and press Enter.

### **Send Preset Messages**

To send a preset message that you created in your Explore account, press and hold the X (Quit) key. Select the message you wish to send, and press Enter. Your preset message will automatically send to the recipients you selected when you set up your Explore account.